

PRESS GRILL

USER MANUAL

SY-PN4

WELCOME


Thank you for purchasing the new Press Grill SY-PN4. In order to get the best out of this product please read the instructions manual carefully. Store the user manual in a safe place for future reference.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS

- Use only on AC 220-240 Volt, 50/60 Hz. This product is intended for household use only.
- Do not touch hot surfaces. Use the handles and knobs.
- To protect yourself against the risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug the unit from the outlet when not in use and before cleaning. Always allow the unit to cool down before putting on or taking off parts, and before cleaning appliance.
- Do not operate any appliance which does not operate correctly or has been damaged in any way. In order to avoid the risk of an electric shock, never try to repair the Press Grill yourself. Take it to an authorized service centre for examination and repair. Any incorrect reassembly could present a risk of electric shock when the Press Grill is used.
- The use of any accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury to persons.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance by a person responsible for their safety.
- Do not use outdoors or for commercial purposes.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or heated oven.
- Unplug the unit when finished using.
- Extreme precaution must be put into effect when moving the appliance.

PARTS IDENTIFICATION

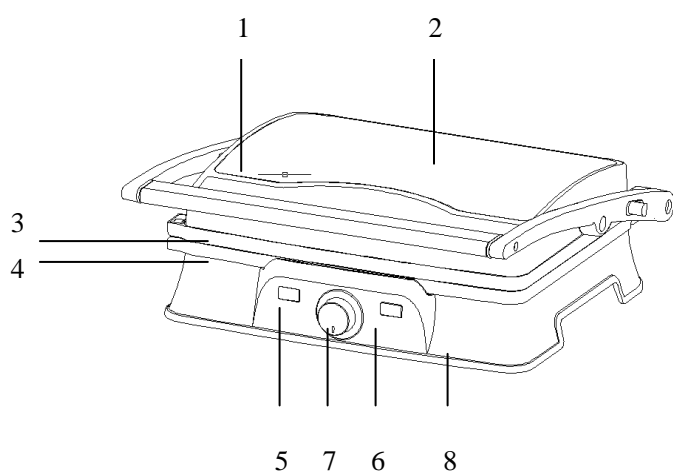

1. Handle
2. Upper Housing
3. Upper Non-stick Plate
4. Bottom Non-stick Plate
5. Ready Light (Green)
6. Power Light (Red)
7. Thermostat Knob
8. Bottom Housing

BEFORE FIRST USE

- Read all the instructions carefully and keep them for future reference.
- Remove all the packaging
- Clean the cooking plates with a soft dampened cloth or sponge.

DO NOT IMMERSE THE UNIT IN WATER AND DO NOT RUN WATER DIRECTLY ON THE COOKING SURFACES.

- Dry with a cloth or paper towel.
- For best results, lightly coat the cooking plates with a little cooking oil or cooking spray.

Notice: When your Press Grill is heated for the first time, it may emit slight smoke or odor. This is normal with many appliances that require heating. This does not affect the safety of your appliance.

HOW TO USE

- Plug the unit into the wall outlet. A red light will turn on to indicate that the power is on.
- Set the Press Grill's temperature control to your desired setting. At first, try the max setting and then you may adjust it lower or higher according to your preference.
- Close the Press Grill with the temperature set as desired. The green light indicates that the preheating process has begun.
- It will take approximately 3 minutes to reach the set temperature, and at this point the ready light (green light) will go off.
- Open the Press Grill, put the sandwich, meat or other food on the bottom cooking plate.
- Close the Press Grill and at this point the ready light will go on again.
- Cook for about 3 to 8 minutes until the ready light goes off again, or until a golden brown color has been obtained on the food. You may also adjust the time to suit your own individual taste.
- When the food is cooked use the handle to open the lid. Remove the food with the help of a plastic spatula. Never use metal tongs or a knife as these can cause damage to the non-stick coating of the cook plates.
- Once you have finished cooking, disconnect the plug from the wall outlet and leave the unit open to cool.

CLEANING AND CARE

- Always unplug the Press Grill and allow it to cool before cleaning. The unit is easier to clean when it is slightly warm. There is no need to disassemble Press Grill for cleaning. Do not place the Press Grill in the dishwasher.
- Wipe the cooking plates with a soft dampened cloth to remove food residue. For baked

food residue squeeze some warm water mixed with some detergent over the food residue and then clean with a non abrasive plastic scouring pad. Another alternative would be to place a wet kitchen paper over the grill to moisten the food residue.

- Do not use anything abrasive or sharp that can scratch or damage the non-stick coating.
- Wipe the outside of the Press Grill with a damp cloth only. Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish.
- Remove and empty the drip tray after each use and wash the tray in warm, soapy water. Avoid the use of scouring pads or harsh detergents as they may damage the surface.
- Store the unit in a safe place after use.

STORAGE

- Always unplug the Press Grill before storage.
- Always make sure the Press Grill is cool and dry before storing.
- The power cord can be wrapped around the bottom of base for storing.

SPECIFICATIONS

Power: 2000W

Temperature range: 190-230°C

Size of plate: 297x235 mm

Dimensions: 344x325x126mm

Weight: 2.9Kg

DECLARATION OF CONFORMITY

Manufacturer Name: Satyatrade S. L.

Address: Pol. Ind. La Raya. C/ Guadalquivir, 2.

Camarma de Esteruelas, 28816 Madrid

Tel: 902 430 967

Fax: 91 8864285

NIF: B83254763

Manufacturing country: China

Sytech® SY-PN4 complies with the following directives:

CE standard: EMC Directive 2004/108/EC

EN 55014-1:2006/+A1:2009

EN 55014-2-1997/+A1:2001/+A2:2008

EN 61000-3-2:2006+A1:2009+A2:2009

EN 61000-3-3:2008

Low Voltage Directive: 2006/95/EC

EN 60335-2-9 :2003+A1 :2004+A2:2006+A12:2007

EN 60335-1:2002+A11 :2004+A1 :2004+A12 :2006 +A2:2006+A13:2008+A14 :2010

EN 62233:2008

ROHS standard: 2002/95/EC Restriction of Hazardous Substance

Signed: Ajeet Nebhwani Utamchandani

Sole Administrator

